




6 TONNE TRUCK CRANE – (BÖCKER AK 48)

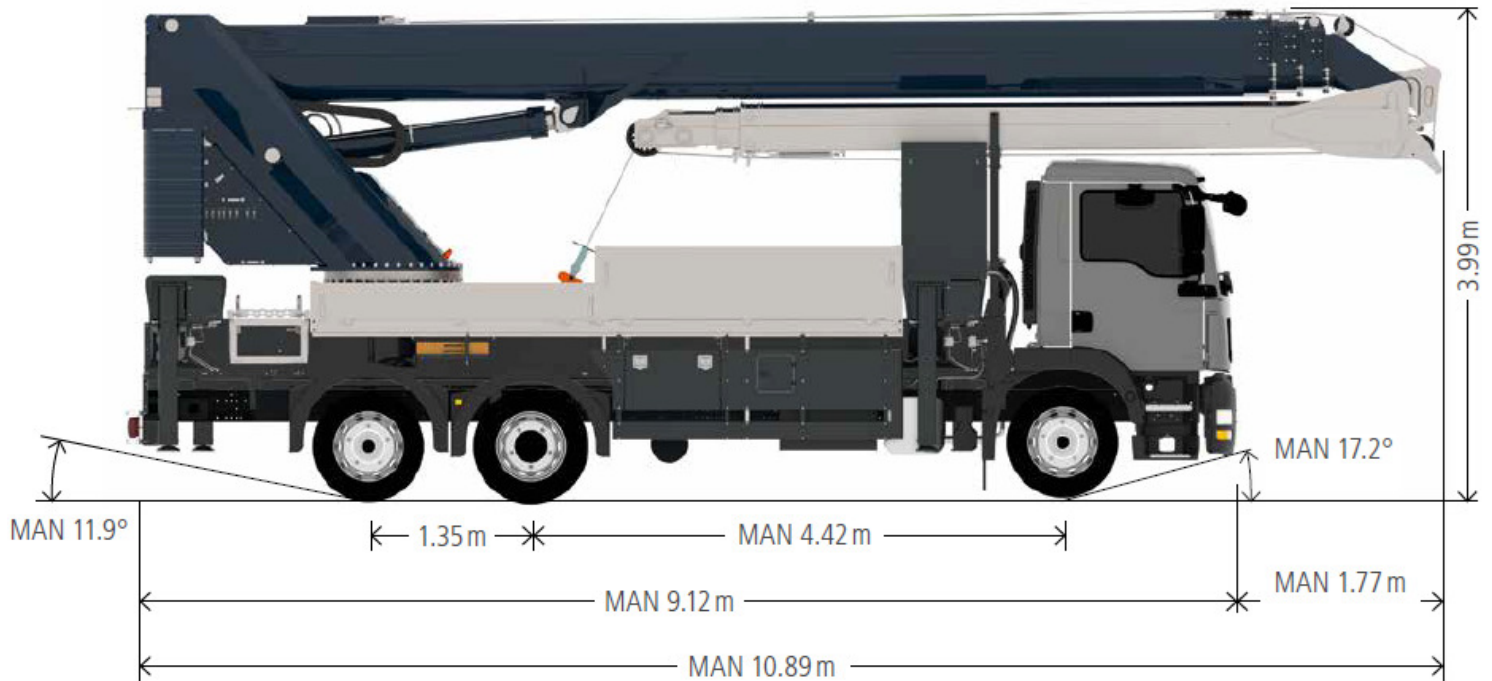


Böcker
AK 48

NEED ADVICE?

We have experienced staff who can help you. We can visit your site to discuss your needs.


+44 (0) 1902 405553

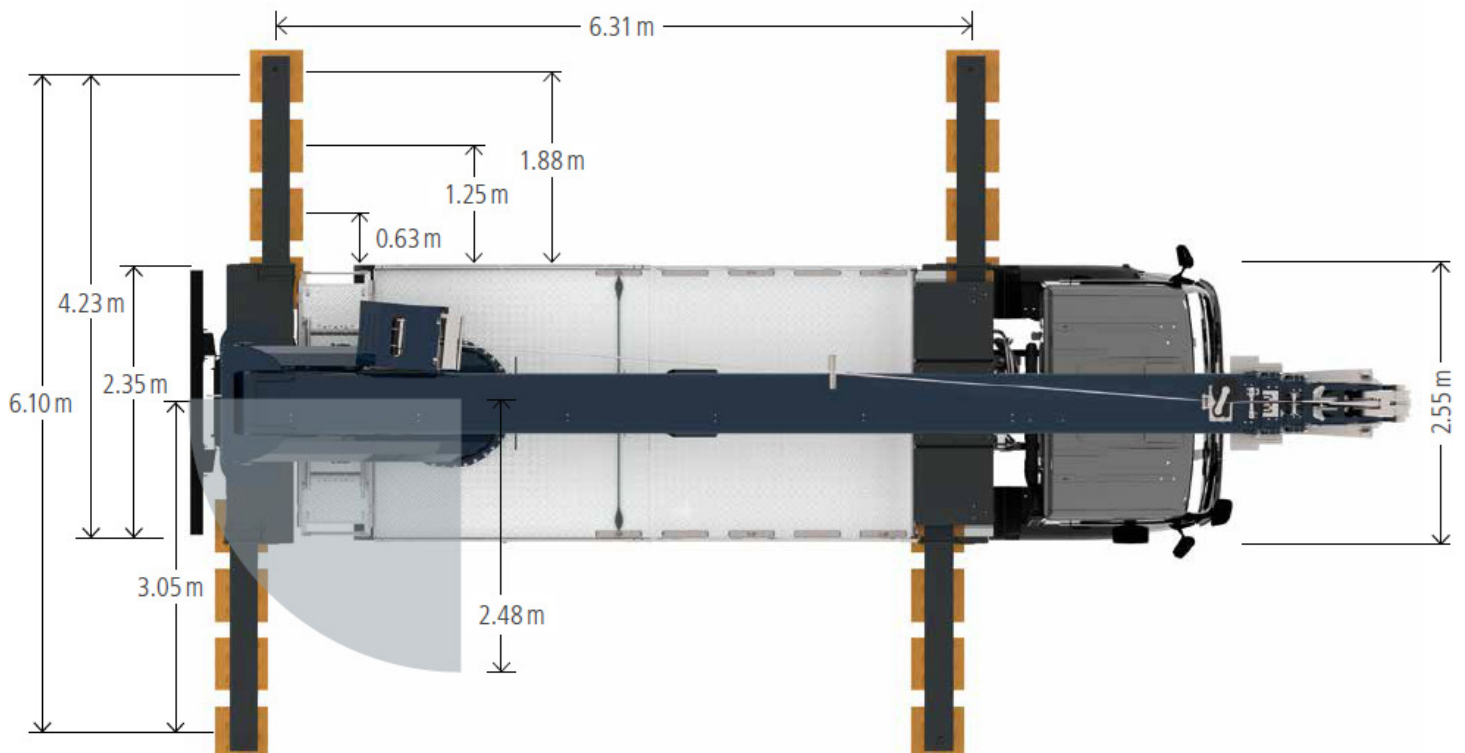



6 TONNE TRUCK CRANE – (BÖCKER AK 48)

kg Load in kg

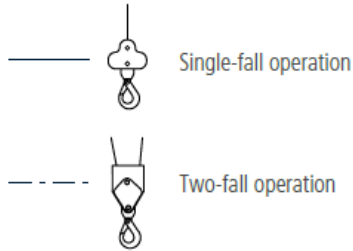


AK 48

Working range crane operation

NEED ADVICE?

We have experienced staff who can help you. We can visit your site to discuss your needs.

+44 (0) 1902 405553

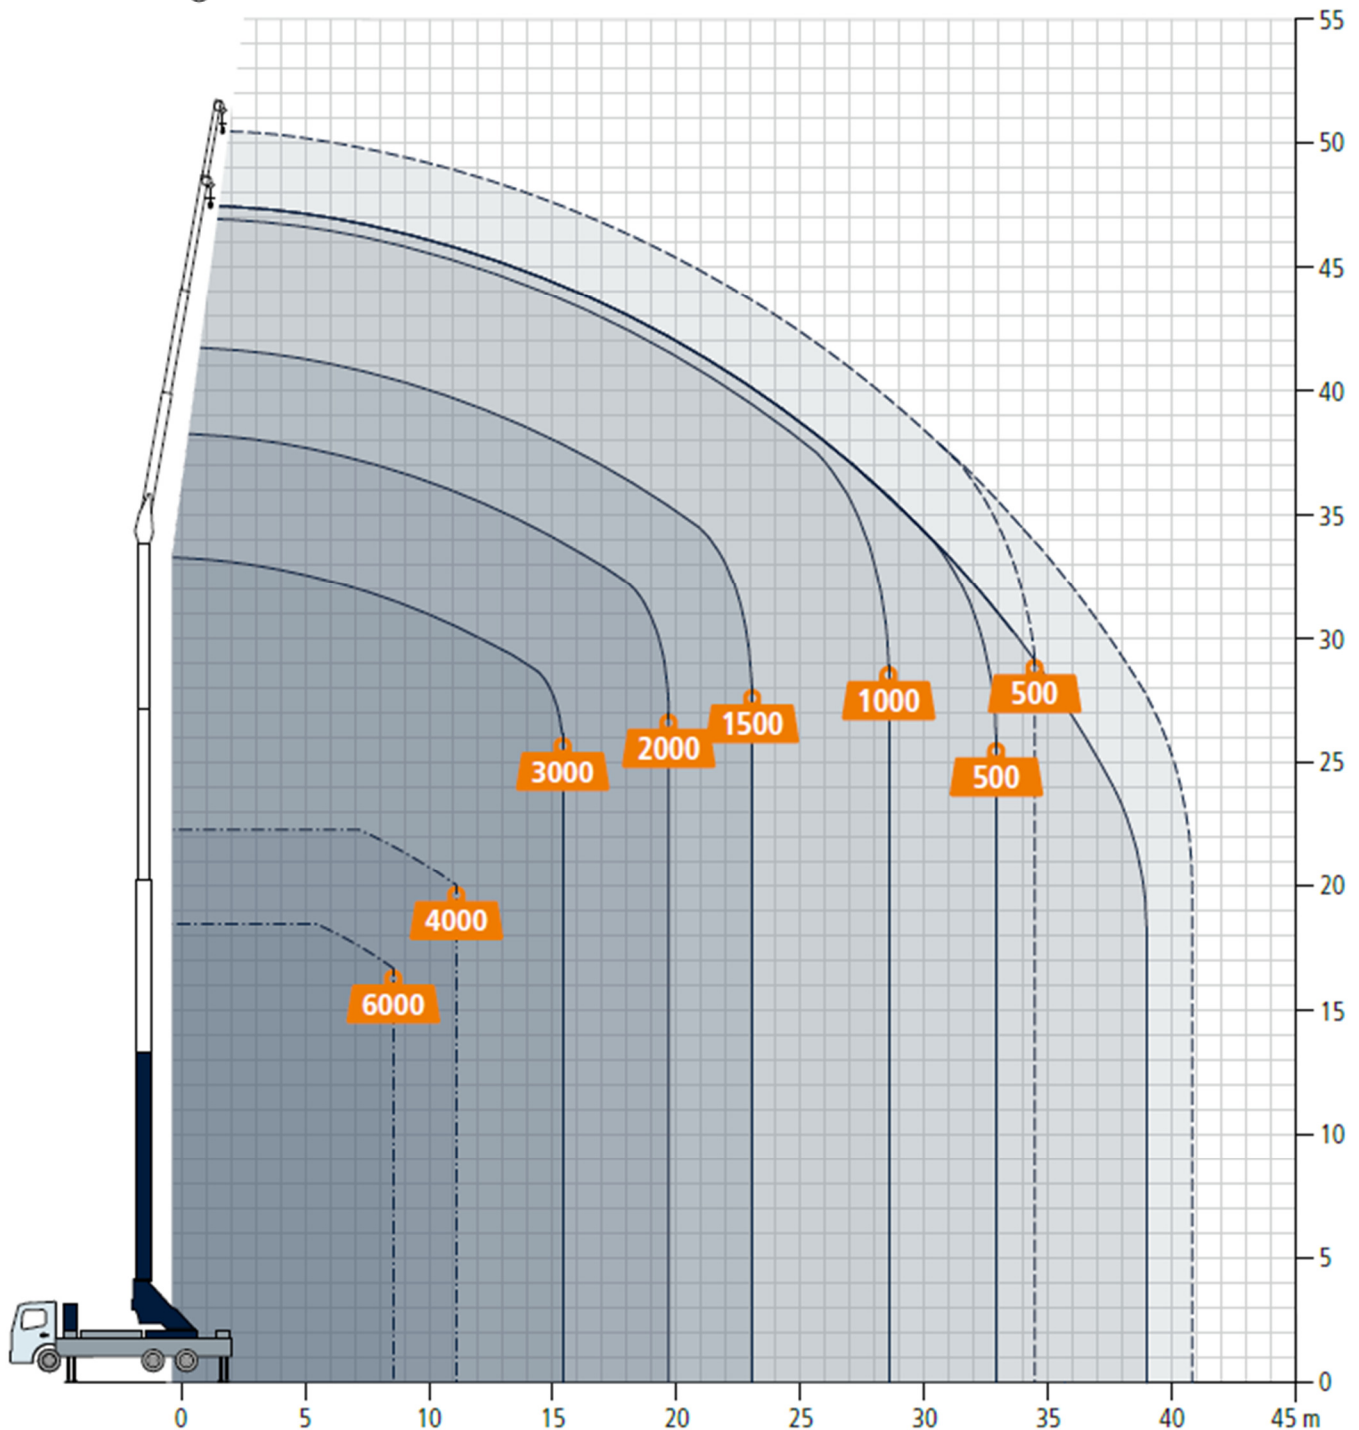



6 TONNE TRUCK CRANE – (BÖCKER AK 48)



NEED ADVICE?

We have experienced staff who can help you. We can visit your site to discuss your needs.

+44 (0) 1902 405553

Böcker
AK 48

Tower Crane Mode

The boom can be set up completely vertical at a 90° angle to the vehicle. In addition, the aluminium boom, which can be hydraulically extended to over 14 m, can be erected in a 180° position with the joint fully extended. In tower crane mode the AK 48 telescopes loads directly into a building thanks to a right-angled jib position.

